

# Sinfoni

For Music Lovers

***AMPLitude 150.2x***



Owner's Manual

# Preface

First of all, we would like to congratulate with you for your choice of our Sinfoni AMPLItude amplifier.

If you are reading this short introduction instead of madly flick across the pages of this handbook looking for features like the weighted noise or the T.I.M., then maybe we have hit the target to unveil a little bit of the philosophy of our laboratories.

In fact, you will not find these figures among the characteristics of our products mainly because it is our firm conviction that it is impossible to value such a product only on the basis of plain numbers.

It would be like guessing the taste of a dish reading just the list of its ingredients.

Only after a suitable "tasting" you will realise the striking sound properties of our products, and you will appreciate their transparency, their musicality, their depth and all other aspects that probably, as a Sinfoni purchaser, you already know.

Try to describe it with cold technical parameters, if you can!

In order to get the utmost from our products, we recommend you to use only high-quality components and cables: with a few adjustment every Sinfoni amplifier will give you unexpected emotions and sensations.

We kindly ask you to follow the indications mentioned in this handbook, and we wish you to enjoy Music at best.


# Installation Procedure

## POWER SUPPLY

The Sinfoni car amplifiers are designed to work with a 12 volts DC power supply, however they allow +/- 3 V voltage excursions.

Power Supply cables must be of a suitable gauge, keeping in mind that the negative one must be connected to the ground in the nearest point of the car chassis, while the positive one must come directly from the battery. If the distance from the battery to the apparatus is quite long, then it will be necessary to use thicker cables, in order to avoid any performance loss: we suggest your installer to use at least 10 mm<sup>2</sup> good quality OFC cables.

The REM input ( remote ) must be connected to the remote output of the source, and the Fan output to an external fan with low loads. It can supply up to 500mA at 12V, turns on when the temperature of the unit exceeds 50°C and turns off only when this lowers under 40°C even if the remote keeps the amplifier OFF.

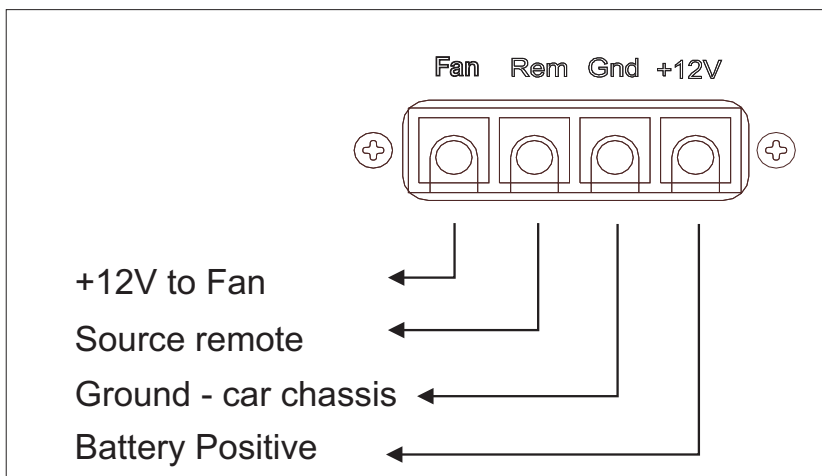


## CONNECTING LOUDSPEAKERS


The standard load impedance fitting to the amplitude series is 4 Ohm, but these amplifiers are fearless of a lower impedance like the one that can be easily found in a car ( three way systems or highly reactive loudspeakers ).

Connecting a 2 Ohm load is not a problem, in fact, as it is possible to use a simultaneous stereo-mono configuration, then it is still possible to connect a 4 Ohm Sub Woofer to a 4 Ohm system to the bridged output. This would decrease the overall load to about 1,3 Ohms per channel. In such a case, a suitable ventilation must be provided, as well as an adequate power supply cable, due to the strong impulsive current, ranging between 50 and 80 A.


The following images clearly show the possible connections.

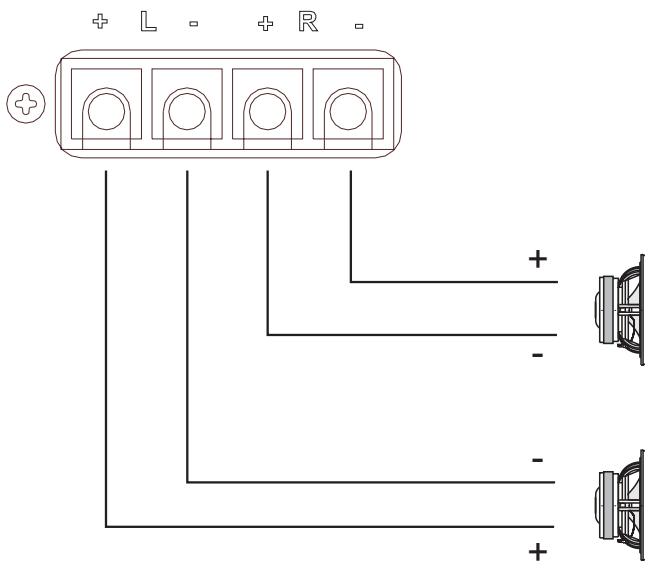

**STEREO Connection**

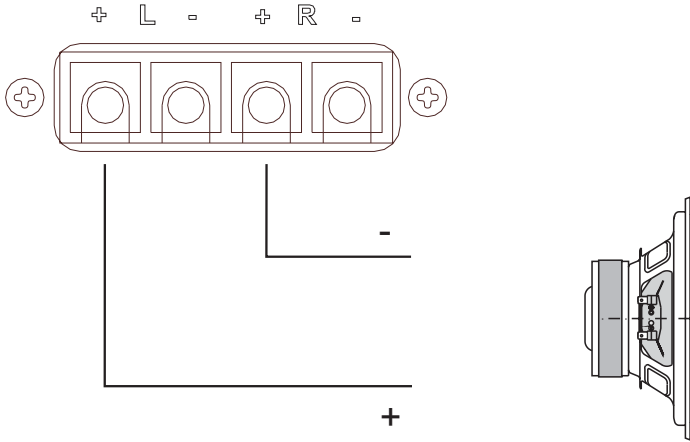

**MONO Connection**

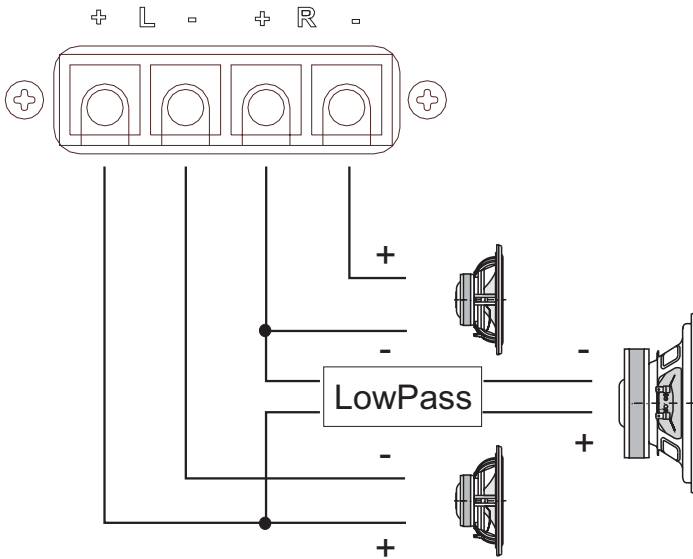

**Simultaneous  
STEREO-MONO Connection**

## INPUTS

The input load is 48 Kohms, and its sensitivity is adjustable from 400 mV peak - peak (150 mV RMS) to 8 V peak - peak (2.8 V RMS), therefore it perfectly matches any source, including those that provide a 4 V pre out (1.4 V RMS). The regulation is achieved rotating the input R & L potentiometers with a common screwdriver.

The small pushbutton insert the low-pass active crossover in the signal route: its cut frequency can be regulated from 40 to 200Hz by the apposite control.

In order to obtain the BRIDGED MONO operation it is possible to set the amplifier to use only the left amplifier's side.

It is necessary to disassemble it removing the four screws.

## LEDS and PROTECTIONS

The LED nearby the power connector shows the presence of the remote signal: if remote is applied and the led is off probably you need replacing fuses witch are located internally, just behind the LED (two fuses of 30A each one).

You can easily reach them disassembling the amplifiers's side.

In any case, their break is to be considered as an unlikely event, due only to a serious failure.

As stated before it is possible to use an external fan for an heavy duty use, however the thermal protection (82°C) prevents the amplifier damage.

# Specifications

Power Supply	9-15 VCC
Stand-by Current	< 1,2 A
Input Sensitivity	0,4 - 8 V
Input Impedance	48 KOhm
Output Power:	
4 ohms @ 12V/13,8V	165/165 watts x 2
2 ohms @ 12V/13,8V	294/315 watts x 2
mono 4 ohms @ 12V/13,8V	590/635 watts x 1
mono 2 ohms @ 12V/13,8V	775/925 watts x 1
Frequency Response	+/- 1 dB from 10 Hz to 30KHz.
S./Noise Ratio	> 90 dB
Dimensions	434mm x 187mm x 40mm
Weight	4,5 Kg

Built in Active Cross-Over

Continuously adjustable from 40Hz to 200Hz  
low-pass mono 24dB x octave



Produced by:  
Audio Technology  
Tel. +39.0733.240231  
e-mail [info@sinfoni.com](mailto:info@sinfoni.com)  
[www.sinfoni.com](http://www.sinfoni.com)